

## MIGRATION GUIDE

### INITIAL GUIDANCE

If you have a factory-default Unleashed Access Point (AP) and no active Unleashed cluster in your network, then go ahead and add that AP's serial number into your cloud user interface, observe the LEDs on the AP for troubleshooting tips, and you are ready to experience Cloud Wi-Fi. Refer to the [Quick Start Guide](#) for exact details of the deployment.

**If you have an active Unleashed network and want to use one or more of the APs for the Cloud Wi-Fi trial, please follow the steps below.**

### CONVERT YOUR EXISTING UNLEASHED APs FOR THE CLOUD WI-FI TRIAL

1. Unplug all APs from Ethernet.
2. Factory reset the APs that you want to connect to the Ruckus Cloud.
  - Power on the AP and wait 30 seconds for the AP boot process to proceed. Then press and hold the reset button for 10+ seconds.
3. Add this AP serial # to your cloud account.
4. Repeat steps #2-#3 for each AP that you want to add to your cloud account.
5. Wait for these APs to connect to the Ruckus Cloud prior to step 6.
  - The AP status in the Cloud user interface will show as "operational."
  - Refer to the AP LED status in the [Quick Start Guide](#).
6. You can now connect your remaining Unleashed APs to the Ethernet.
  - The Cloud APs and Unleashed cluster can now co-exist.

**PLEASE NOTE THAT THIS PROCESS IS FOR TRIAL PURPOSES ONLY. THIS IS NOT RECOMMENDED FOR A COMPLETE MIGRATION OF YOUR UNLEASHED APs TO CLOUD WI-FI. A FUTURE SOFTWARE UPDATE WILL AUTOMATE THE CONVERSION TO CLOUD WI-FI.**